



PowerBass-700


Wireless Bluetooth Headphones



USER'S MANUAL

Thank you for purchasing TAGG PowerBass-700 Wireless Headphones. Our main goal is to please you with superior sound quality and comfort combined with convenience of hands free operation. Here is some useful piece of information that will help you to operate this headphones properly.

Product Overview:

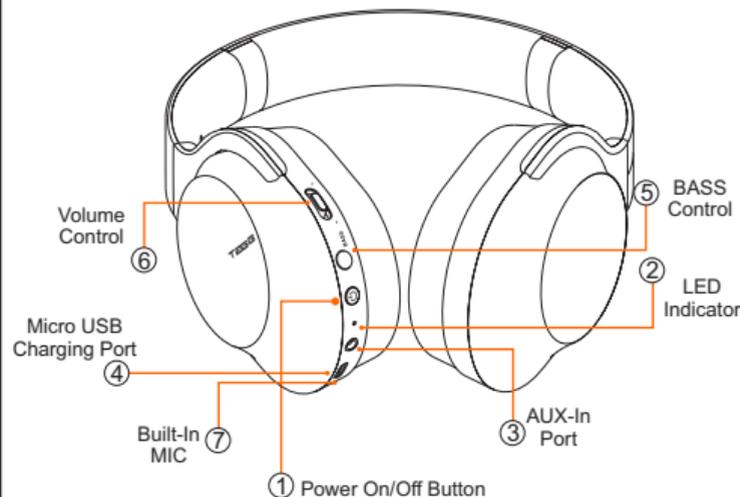

Headphones Controls:

FUNCTION	OPERATION
POWER ON	Long press the POWER button for 2 secs
POWER OFF	Long press the POWER button for 2 secs
Pairing mode	Blue and Red LED will start blinking
Connected	Blue LED will blink
Answer call	Short press the POWER button
End call	Short press the POWER button
Change track	Push Up/Down button for 3 secs
Volume "+" & "-"	Short push Up/Down button
MIC volume	Short push Up/Down button while on call
BASS control	Short press BASS button for extra BASS

Connecting with your device:

- Keep your bluetooth device within 10ft. while pairing.
- Press the POWER button for 2 secs.
- Blue and Red LED will blink when the headphones are in pairing mode.
- Now search for available bluetooth devices in your Mobile/Laptop/iPad and select PowerBass-700 from the list of available devices.
- If prompted, enter password or PIN required "0000".
- If prompted by your mobile phone to connect, click "YES".
- After successfully connecting, Blue LED will flash after every 1 sec.

How to charge:

- Connect to power using Micro USB cable.
- To better protect the battery life, kindly use only the charging cable provided with the headphones.
- Allow 2-3 hours to completely charge the headphones.

LED indications:

- While charging - Red LED is ON.
- When completely charged - Red LED is OFF.
- When battery is low - Red LED blinks slowly.
- Pairing mode - Blue and Red LED start flashing.

Reconnect the headphones:

- If the connection is lost, PowerBass-700 will try to reconnect automatically.
- If it does not reconnect, kindly press the POWER button for 3 secs and reconnect manually through your mobile bluetooth.

Common problems and solutions:

- ▶ **Mobile can't find the headphones:**
 - Kindly restart your phone and the headphones.
- ▶ **There's always noise and the bluetooth keeps disconnecting:**
 - The headphones need to be charged.
 - Make sure you are not beyond the signal distance.



Thank you very much for choosing TAGG as your trusted Bluetooth Headphone brand and we sincerely hope you enjoy the great sound and comfort TAGG provides. We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase let us know immediately and we will do anything to make sure you are happy.

Contact Us : support@taggdigital.com
Website : www.taggdigital.com

We are Social, Follow us on:-

 <https://www.facebook.com/TAGGDigital/>

 <https://twitter.com/TAGGOOfficial>

 https://www.instagram.com/tagg_digital/

 https://www.youtube.com/channel/UCjLX5UcN_tHFaMeFBplqJhg

Safety rules:

- Avoid overcharging.
- Do not keep the headphones in closed area and avoid being exposed to hot temperature.
- Never disassemble or modify your headphones because of any reason.
- Make sure the headphones do not get wet.

Exceptional warranty:

We offer simply the best, customer support that will never rest until you are absolutely satisfied!
TAGG products come with 12 months replacement warranty. Product registration is mandatory on our website within 15 days of your purchase in case you want to claim the warranty.

Accessories list:

- 1 x PowerBass - 700 Headphones
- 1 x Micro USB Charging Cable
- 1 x Aux Cable
- 1 x Manual



▶ Bluetooth is connected but you are unable to listen to music:

- Check your device setting to adjust the sound of headphones.
- Some devices require you to select the device twice.
- Some devices do not have complete stereo bluetooth. Kindly connect the headphones with another device to check if they are functioning properly.

▶ Bluetooth password:

- "0000"

▶ Maximum operating distance:

- 10 ft.

▶ Red LED is not ON while charging:

- This could be due to lack of use. Headphones need to be charged for 30 min before the Red LED occurs.

▶ Using 3.5mm wired cable on headphones:

- Connect one end of the included 3.5mm auxiliary cable to the AUX-IN jack on the headphones, and the other end of the cable to the external device's headphones jack port (smartphone's, tablets, computers or MP3 players).

- Open a media player on your device and click on PLAY to start playing your music.

- Use the controls on your connected device to control music playback and volume.